



# INDUSTRIAL SOLUTIONS LAUNDRY

info@ayvaz.com www.ayvaz.com

Rev.0623

JSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDR NDRY INDUSTRIAL SOLUTIONS INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS AUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL ONS LAUNDRY INDUSTRIAL SOLUTIONS INDUSTRIAL SOLUTIONS LAUNDRY LAU JSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDR NDRY INDUSTRIAL SOLUTIONS INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS AUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL ONS LAUNDRY INDUSTRIAL SOLUTIONS INDUSTRIAL SOLUTIONS LAUNDRY LAU JSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDR NDRY INDUSTRIAL SOLUTIONS INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS AUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL ONS LAUNDRY INDUSTRIAL SOLUTIONS INDUSTRIAL SOLUTIONS LAUNDRY LAU JSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDR NDRY INDUSTRIAL SOLUTIONS INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS AUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL ONS LAUNDRY INDUSTRIAL SOLUTIONS INDUSTRIAL SOLUTIONS LAUNDRY LAU JSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LAUNDR NDRY INDUSTRIAL SOLUTIONS INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS LALINDRY INDUSTRIAL SOLUTIONS LAUNDRY INDUSTRIAL SOLUTIONS



# LAUNDRY

Energy is getting more important day by day. According to the diminishing of energy sources, industries searching for alternative sources for increasing the productivity.

In boilers, dryers, heat exchangers, iron heaters, washing machines or any other processes energy efficiency can be 25-30% higher according to application investments with low redemption times.

In this case steam getting more important. Trapping steam and more heat usage depends on the correct steam equipment selection. Althought steam traps look simple and small, their mission is very complex.

Saving more energy is related to the right chosen steam equipment and sizes. Working principles should be known well for choosing the right steam equipment for the process.

As Ayvaz, we are working for produce best quality steam equipment in our factory in Istanbul in order to help our customers and the users to get the most efficiency from their steam systems.

We aimed to explain our audit experiences and technical knowledge to partners and introduce different type of steam applications and all related products with details in this catalogue.



### WASHING MACHINE

### WASHING MACHINE

#### **OPERATING PROCESS**

The solvent used in the washing machines must be heated before being sprayed onto the laundry. This process is costly when done with electricity. Steam is supplied to the solvent heating units of the washing machines. The condensate that will be formed from the solvent mixing steam of the washing machines cannot be reused. for this reason, only the entrances of the washing machines have a steam trap group.

#### **STEAM USAGE**

25-400 kg/h Steam Usage 1-7 BAR Working Pressure 120-140 C Working Temperature


#### WASHING MACHINE TYPES

Conventional textile washing and spinning machines barrier type hygienic washing and squeezing machines tunnel type washing and squeezing machines.





EQUIPMENT NEEDS Thermodynamic Steam Trap (main line) Bellow Sealed Valve Strainer Checkvalve

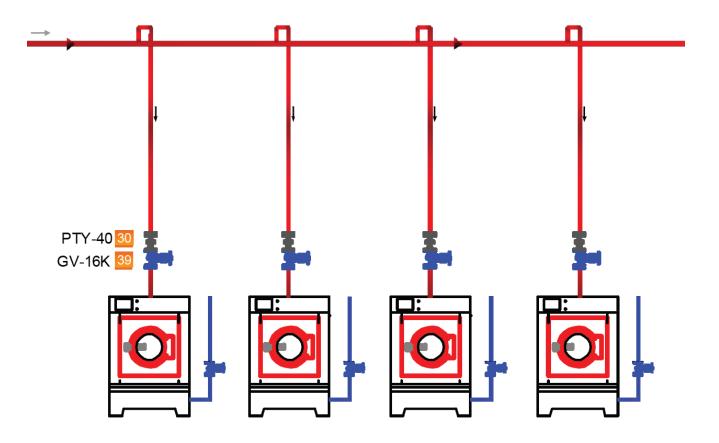



# WATER DRAGGING IN STEAM LINES - DRYERS

#### DRYERS

#### **OPERATING PROCESS**

They are used for drying the laundry which does not need to be ironed or which needs to be pre-dried before ironing. Various capacities are available with single doors, separate loading and unloading doors or tilting models. They are electrically heated, steam or gas heated and their drums are stainless steel or galvanized. The working principles are the drying of the laundry by hot air circulation while the laundry rotates in the drum.

#### **STEAM USAGE**

25-400 kg/h Steam Usage 1-7 BAR working pressure 120-140 C Working Temperature

#### **DRYER TYPES**


Tumble Dryers Tunnel Type Dryers Cylndric Dryers



#### LAUNDRY



EQUIPMENT NEEDS Thermodynamic Steam Trap (main line) Float Type Steam Trap Bellow Sealed Valve Strainer Checkvalve Stainless Steel Flexible Metal Hoses

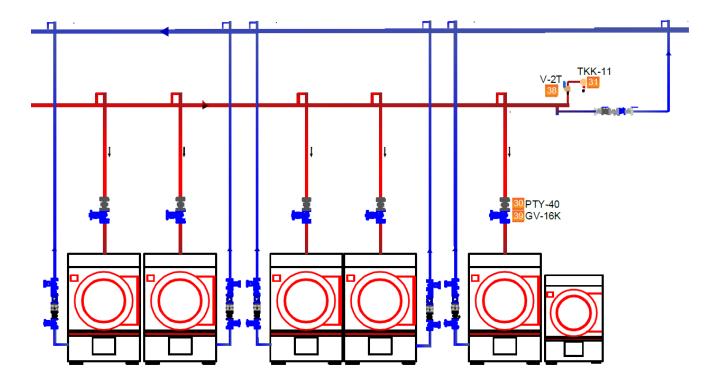



### **STEAM USAGE IN LAUNDRY - IRONING**

### IRONING

#### **STEAM USAGE**

25-35 kg/h Steam Usage 4-5 BAR working pressure 150-160 C Working Temperature


#### **IRON TYPES**

Cylinder Irons Roller Folding Machines Roller Folding / Ironing, Feeding Machines Finishing Irons Model Irons Blowers Iron Robots





EQUIPMENT NEEDS Thermodynamic Steam Trap Bellow Sealed Valve Strainer Checkvalve

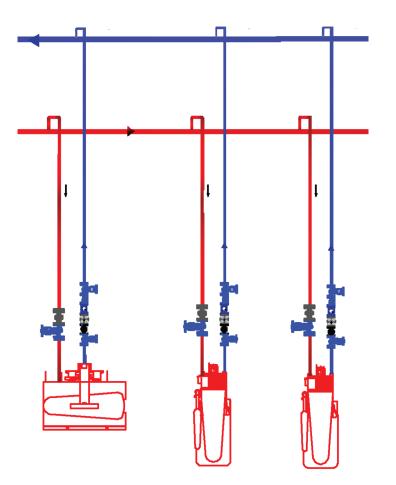



### **CONDENSATION AMOUNT**


|                           | TEXTILE INDUSTRY STANDARD MACHINE INFORMATION |                            |                   |                        | STEAM CONSUMPTION (kg/h) |  |
|---------------------------|---|----------------------------|-------------------|------------------------|--------------------------|--|
| TYPE OF DEVICE OR PROCESS |   | STEAM<br>PRESSURE<br>(bar) | CAPACITY          | CLOSED<br>COND. SYSTEM | OPEN<br>COND. SYSTEM     |  |
| Laundry machines          | Stain Removal Machine                         |                            |                   | 5                      |                          |  |
|                           | Dry Cleaner                                   | 4,0 - 5,0                  | 1 kg of Clothes   |                        | 0,5                      |  |
|                           | Laundry                                       |                            | 20 kg of Clothes  | 21                     | 25                       |  |
| RY                        |   |                            | 40 kg of Clothes  | 30                     | 35                       |  |
| Q                         |   |                            | 60 kg of Clothes  | 43                     | 50                       |  |
| AUI                       |   |                            | 100 kg of Clothes | 68                     | 80                       |  |
| Ľ.                        |   |                            | 150 kg of Clothes | 85                     | 100                      |  |
|                           |   |                            | 300 kg of Clothes | 102                    | 120                      |  |
| (0                        | Tumble Dryer                                  |                            | 20 kg of Clothes  | 21                     | 25                       |  |
| NË                        |   |                            | 30 kg of Clothes  | 30                     | 35                       |  |
| Ξ                         |   |                            | 40 kg of Clothes  | 38                     | 45                       |  |
| 1AC                       |   |                            | 60 kg of Clothes  | 55                     | 65                       |  |
| DRYING MACHINES           |   |                            | 100 kg of Clothes | 94                     | 110                      |  |
| ∠ X                       |   |                            | 150 kg of Clothes | 136                    | 160                      |  |
| D                         |   |                            | 160 kg of Clothes | 340                    | 400                      |  |
|                           | Steam Irons                                   |                            |                   | 5                      |                          |  |
| (0                        | Trousers Press                                |                            |                   | 25                     |                          |  |
| Ň                         | Robot Irons                                   |                            |                   | 30                     |                          |  |
| Industriel irons          | Model Blower                                  |                            |                   | 30                     |                          |  |
|                           | Trousers Blower                               |                            |                   | 35                     |                          |  |
|                           | Cylinder Iron                                 |                            | 50 kg of Clothes  | 26                     | 30                       |  |
|                           | Cylinder Iron                                 |                            | 75 kg of Clothes  | 34                     | 40                       |  |
|                           | Cylinder Iron                                 |                            |                   | 51                     | 60                       |  |
|                           | Cylinder Iron                                 |                            |                   | 85                     | 100                      |  |



### **STEAM SEPARATOR SYSTEMS**

In some cases, saturated steam may distribute directly with single line from boiler. That distribution may cause water draggings at system start up. To prevent that problem, separator systems must be installed directly to the steam lines.

In cases where dry and clean steam is required, branch line should be connected to the machine and process with a steam separator. This will help to collect the water at the bottom of the separator and to be discharged from the steam trap.

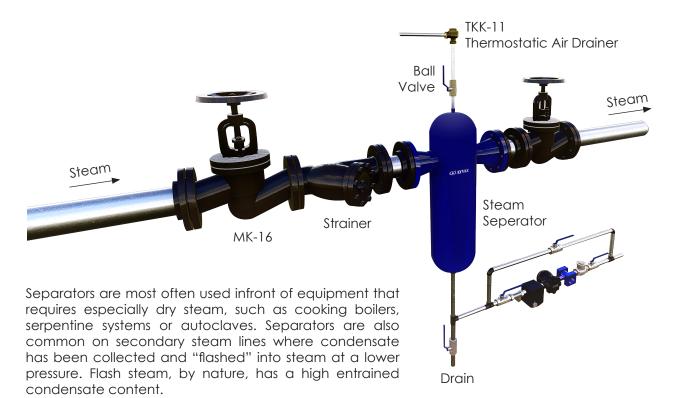




### **CONDENSATE PUMP SYSTEM**

Condensate comes from the input collector and goes on internal pipe and access check valve than enter in condesate pump body so tank is getting full. In tank when the condensate comes on the upper limit, ELK-2 level gauge check the conductivity and change it to electrical signal and send it to 3 way pneumatic valve for the giving contact which is on the steam line than allows it to be opened. In normally steam has more high pressure than the condensate pressure. When 3 way valve is close, system discharge condensate from the system with thermodynamic steam trap.

When the condensate pressure is smaller than the opposite pressure in condensate pump, discharge operation do not ocur. Steam is occurs the condensate discharging with entering the body, which have more pressure than the opposite pressure. When the condensate limit is gettin bottom limit of the tank, ELK-2 level gauge send electrical signal to 3-way pneumatic valve for close the system for entering steam. After that condens enter again and getting full tank . This operation frequency is connect between the condensate quantity. If the users want they can be follow the condensate quantity, from contoller.

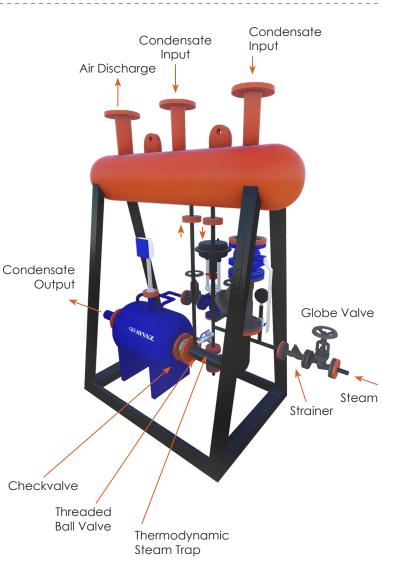



## FLASH STEAM RECOVERY SYSTEMS

The most important components in a cascade system are the Flash Steam Tank Systems which separate the flash vapor from the condensate where the flash and the sweep / blow steam are located. A common mistake in enterprises is called "separator".

It is important that the condensate is drained effectively and not allowed to accumulate in the separators. They can be emptied with a steam trap, an electrically driven pump / level control device, or a steam-driven pump system with a lower choice of both investment costs and operating costs.


#### Why Flash Steam is Important?

It includes too much energy and it can be mount to different installation areas. If Flash Steam drains to the atmosphere there will be waste energy and effeciency lost.

Flash Steam Tanks are used to separate the flash steam from the condensate water.

In order for the flash steam to move towards the top outlet at the correct speed, the diameter of the steam tank must be appropriate. This speed is about 3-5 m/s and the velocity at which water droplets can reach the bottom of the tank. In order to be efficient, the condensate inlet to the tank should be one-third of the tank neck below. The diameter of the flash steam tank should be a diameter that allows the passage of the condensate without coming into turbulence.

If the difference between high and low pressure is small. The amount of steam is less than the amount of condensate. Flash steam outlet pipe selecting the diameter according to the speed will cause the tank to remain small. In which case the tank must be selected to be two diameters larger.

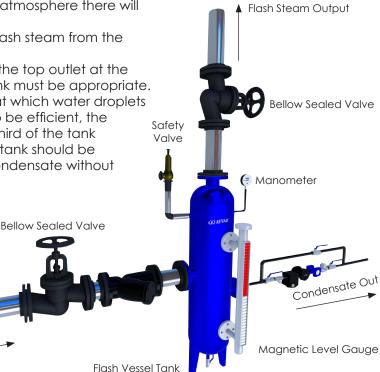




### HEAT EXCHANGERS

In today's conditions, where energy is getting more expensive day by day, there is no need to waste energy in industry or individual use. The budgets allocated to energy in industrial establishments have increased by 20% -40% in recent years and they are at the top of the expenses section. Taking all these points into account, the recovery of energy has become very important. Ayvaz plate heat exchangers prevent the waste of your thermal energy with wide variety of plate and gaskets suitable for each system.

Industrial facilities have many wasted heat sources such as rotten steam and hot water returning from fabric washing. At the same time, there are applications that require heat, such as domestic hot water production and office heating. With the Ayvaz plate heat exchanger you will use to transfer heat from existing heat sources to the part that needs heat, you do not waste your heat and you need to save extra heat for the heat requirement. Nowadays, the most important factor that will relax businesses is to reduce costs. Energy expenses, one of the biggest factor in expenses, are now worth the gold for everyone and cannot be ignored. A heat exchanger to be used for heat recovery with a rough calculation now pays off in 3-6 months and starts to add value to the operation in a short time.





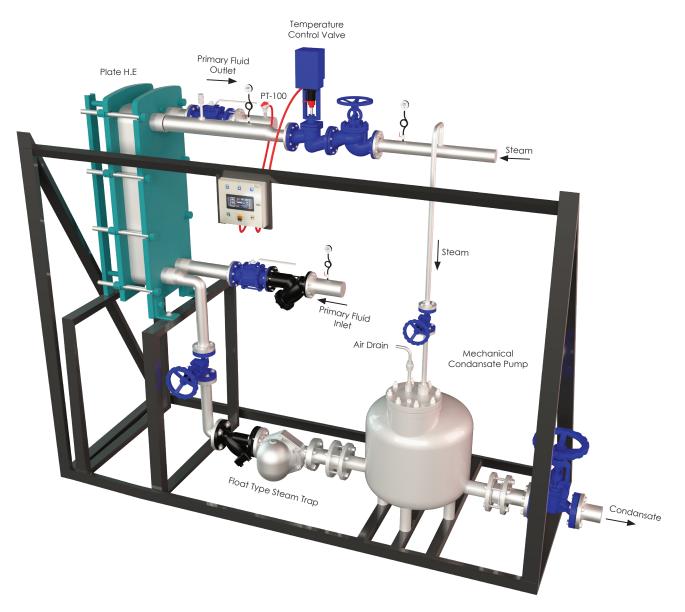




## PRESSURE REDUCING STATION

It requires a primary steam pressure of up to 7 bar for older-style machines in laundry lines and up to 16 bar for new high-speed machines.

Regardless of the type of steam or condensate management system, the primary vapor pressure on the line should be accurate and balanced.


Folding machine's rollers, small pre-heaters, press irons and cylinder irons usually operate at the highest temperature.

Required high pressure steam within 4±0.3 bar (± 2°C).

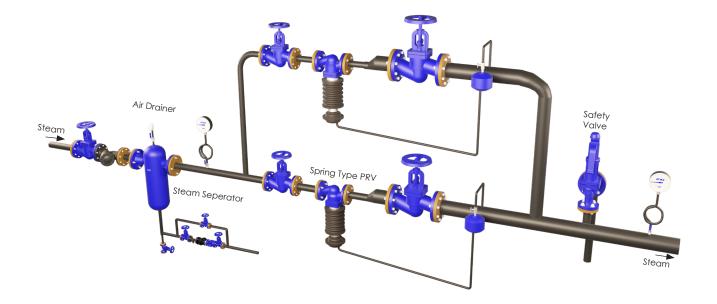



The choice of the main pressure reducing valve must depend on the needs of the system. In a folding machine where the same pressure is always required in high temperature cylinders with a very stable demand throughout the process, a direct effective pressure reducing valve of the correct size can be safely used.

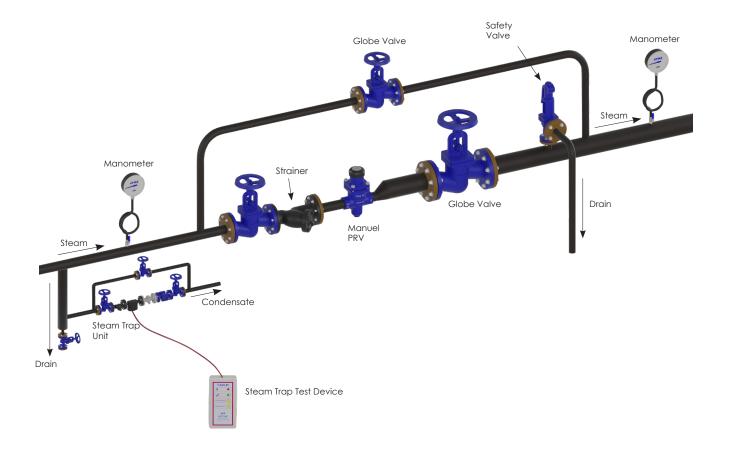




## **STEAM LINE APPLICATIONS**

#### MAIN STEAM LINE APPLICATION

Condensate discharge unit should be placed in main steam lines in every 50 meters if the line is indoor and insulated or in every 30 meters if the line is outdoor and insulated. If any equipment like pressure reducer, pressure holder or proportional valve is installed in the line, a condensate discharge unit must be placed before these equipment.

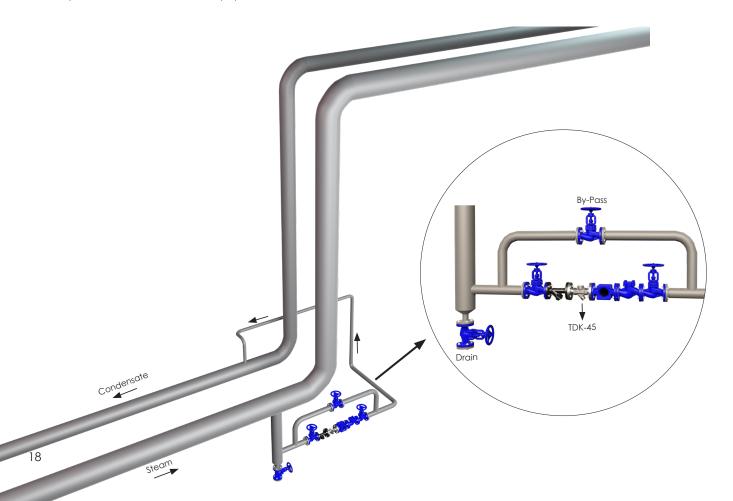




# LINE END APPLICATION


If the steam systems are closed by the process, the steam will turn to condensation until it is turned on again. The volume difference will be filled with air. When the system is switched on again, the air must be evacuated to allow the steam to easily fill the line. This is only possible with "End of Line Application".

The occurred air and condensate around connection areas in the pipelines are dragged to the end of the line. If that air and condensate are not discharged, they may block the steam flow. In such cases, formed air and condensate are discharged with a line end application shown below. The steam trap kind must be thermodynamic.

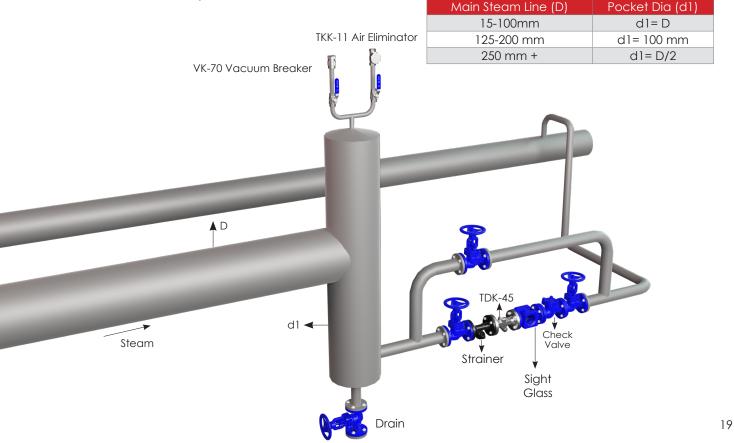




### **PROPORTIONAL FEED WATER SYSTEMS**

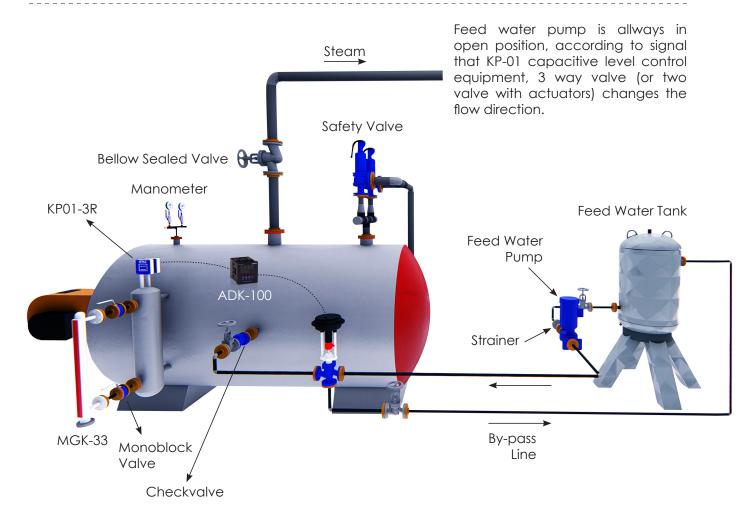




# **ON-OFF FEED WATER SYSTEMS**

Feed water pump is opening and closing continously, according to signal that ELK-4 probe level control equipment, control valve changes the flow direction.

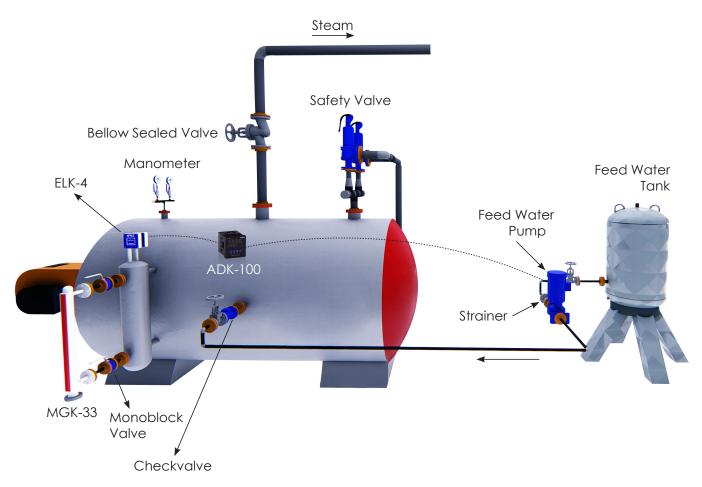



## **APPLICATION EXAMPLE**

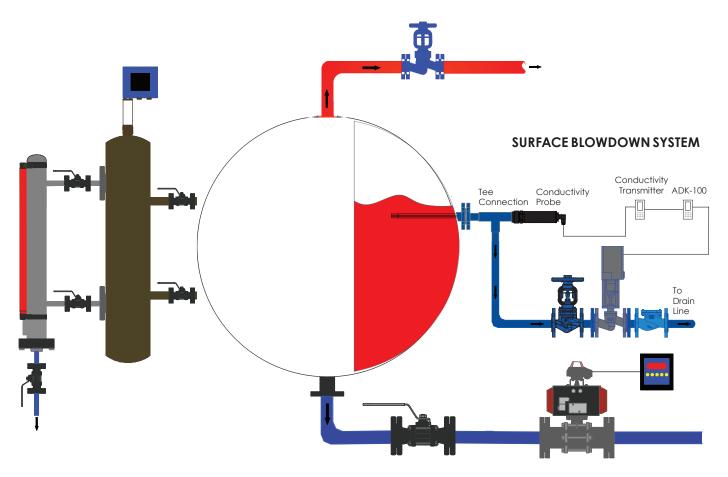

**BOTTOM BLOWDOWN SYSTEM** 



### **BLOWDOWN SYSTEMS**


Surface blowdown and bottom blowdowns are required to ensure a continued safe transmission of the boiler. Sludge deposits are formed in the boiler and must be cleaned at regular intervals.

Sediments must be evacuated periodically to prevent the formation of the sludge layer. Bottom blowdown valves are used for this purpose. The bottom blowdown valve is opened and the pressurized boiler water is discharged from the lower zone of the boiler.

When the valve is opened, the sludge in the lower area of the boiler is effectively discharged by the high water velocity due to the pressure difference. Depending on the type of water preparation system and the dosing system, the steam boiler reaches salt and other foreign substances.

As a result of evaporation, the salinity in the boiler water increases. Salt concentration higher than the limit value causes the boiler stone, boiler corrosion and foam formation.


The foam can also reach the steam installation. Thus, the steam quality decreases and the accumulation of water forces the armatures.

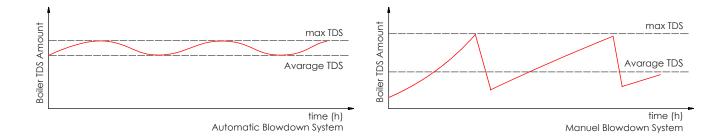



# **CONDENSATION RECOVERY LINE**


After process, saturated steam will transfer the energy and condensation will collect with steam traps to the condensate tanks. Condensate will mix with water supply in feed water tank by pumps, like the diagram below.

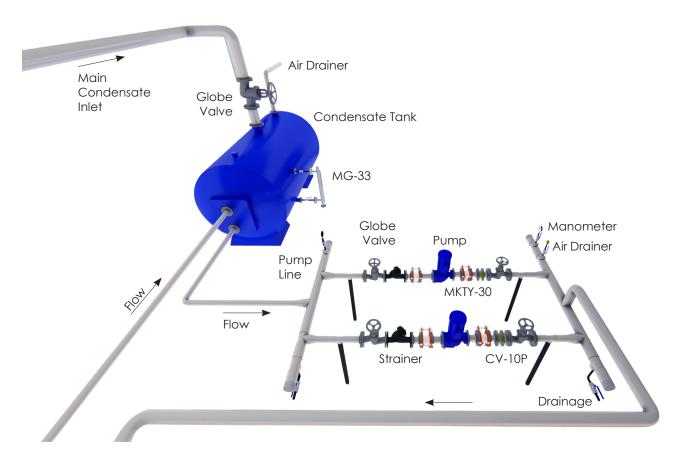



## DEAERATORS

and cause corrosion by forming oxides, or rust. Oxygen and carbon dioxide are responsible for corrosion(pitting). There are two types of boiler deaerators: Tank model or compact deaerators.

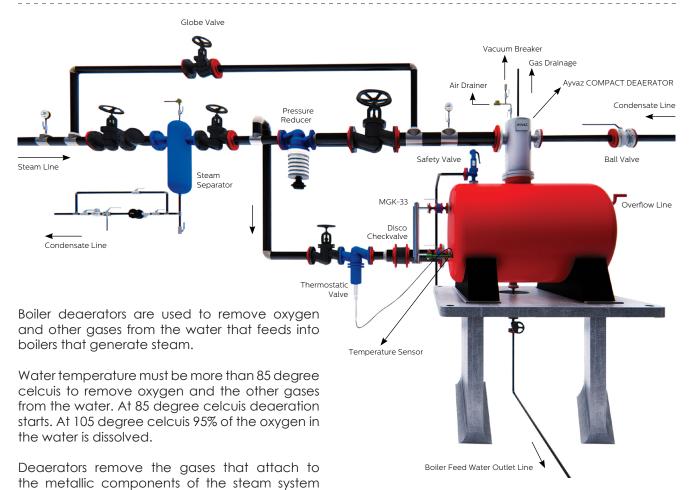

25



# **BOILER ROOM**

The system that distributes steam is called collector. Steam condensates in the collectors. The condensate is usually charged by thermodynamic steam traps from the collectors.

Steam collectors are the first stop in steam distribution. Saturated steam comes directly from boiler. MK-16 bellow seal valves are best option instead of globe valves at this installation.

Collector sizes can calculated with  $D=\sqrt{(d_1^2+d_2^2+d_3^2...d_n^2)}$  formula. Steam trap's pocket size can select according to selection table below;

